

HAWTAI MOTOR

Select from vehicle

Terracan

Remote

10PIN Type 1

Add remote

10PIN Type 2

Add remote

16PIN Type

Add remote

Santa Fe(CHINA)

Immobliser

Type 1

ECU identification

Fault codes

Erase DTC

Live data

Program function

Read security code

Add a key

Erase keys

Read VIN

Check key

Program immobiliser ECU

Program engine ECU

Type 2

Program keys

ECM neutral

Live data

Remote

10PIN Type 1

Add remote

10PIN Type 2

Add remote

16PIN Type

Add remote

Santa Fe(Import)

Immobliser

Type 1

ECU identification

Fault codes

Erase DTC

Live data

Program function

2016.05.15

Read security code
Add a key
Erase keys
Read VIN
Check key
Program immobiliser ECU
Program engine ECU

Type 2

Program keys
ECM neutral
Live data

Type 3

Program keys
ECM neutral
Live data

Type 4

Program keys
ECM neutral
Live data

Remote

10PIN Type 1
Add remote
10PIN Type 2
Add remote
16PIN Type
Add remote

B11

Immobiliser

ECU identification
Fault codes
Erase DTC
Live data
Program function
Read security code
Add a key
Erase keys
Read VIN
Check key
Program immobiliser ECU
Program engine ECU

Remote

16PIN Type
Add remote

B35

Immobiliser

- ECU identification
- Fault codes
- Erase DTC
- Live data
- Program function
 - Read security code
 - Add a key
 - Erase keys
 - Read VIN
 - Check key
 - Program immobiliser ECU
 - Program engine ECU

Remote

- 16PIN Type
 - Add remote

B21

Remote

- 10PIN Type 1
 - Add remote
- 10PIN Type 2
 - Add remote
- 16PIN Type
 - Add remote

Select from type

Immobiliser

Type 1

- ECU identification
- Fault codes
- Erase DTC
- Live data
- Program function
 - Read security code
 - Add a key
 - Erase keys
 - Read VIN
 - Check key
 - Program immobiliser ECU
 - Program engine ECU

Type 2

- Program keys
- ECM neutral
- Live data

Type 3

Program keys

ECM neutral

Live data

Type 4

Program keys

ECM neutral

Live data

Remote

10PIN Type 1

Add remote

10PIN Type 2

Add remote

16PIN Type

Add remote