

OPEL

Read security code

Switch ignition on

Read security code

Type 1

Immobiliser

Select from vehicle

Agila 00-08

ECU identification

Fault codes

Erase DTC

Live data

Input security code

Input security code

Program function

Program keys

Erase keys

Astra 95-04

ECU identification

Fault codes

Erase DTC

Live data

Input security code

Input security code

Program function

Program keys

Erase keys

Astra

Erase keys

Program keys

Calibra 95-98

ECU identification

Fault codes

Erase DTC

Live data

Input security code

Input security code

Program function

Program keys

Erase keys

Combo 98-

ECU identification

Fault codes

Erase DTC

Live data
Input security code
 Input security code
Program function
 Program keys
 Erase keys
Corsa 95-06
 ECU identification
 Fault codes
 Erase DTC
 Live data
 Input security code
 Input security code
Program function
 Program keys
 Erase keys
Insignia
 With smart
 All smart keys lost
 Add a smart key
 Erase DTC
 Live data
 Without smart
 All keys lost
 Erase DTC
 Live data
Meriva 02-
 ECU identification
 Fault codes
 Erase DTC
 Live data
 Input security code
 Input security code
Program function
 Program keys
 Erase keys
Movano 98-01
 ECU identification
 Fault codes
 Erase DTC
 Live data
 Input security code
 Input security code
Program function

- Program keys
- Erase keys
- Omega
 - Type 1
 - ECU identification
 - Fault codes
 - Erase DTC
 - Live data
 - Input security code
 - Input security code
 - Program function
 - Program keys
 - Erase keys
 - Type 2
 - ECU identification
 - Program keys
 - Erase keys
- Sintra 97-98
 - ECU identification
 - Fault codes
 - Erase DTC
 - Live data
 - Input security code
 - Input security code
 - Program function
 - Program keys
 - Erase keys
- Tigra 95-02
 - ECU identification
 - Fault codes
 - Erase DTC
 - Live data
 - Input security code
 - Input security code
 - Program function
 - Program keys
 - Erase keys
- Vectra 95-02
 - ECU identification
 - Fault codes
 - Erase DTC
 - Live data
 - Input security code
 - Input security code

- Program function
 - Program keys
 - Erase keys
- Zafira 99-05
 - ECU identification
 - Fault codes
 - Erase DTC
 - Live data
 - Input security code
 - Input security code
- Program function
 - Program keys
 - Erase keys
- Select from type
 - Type 1
 - With smart
 - All smart keys lost
 - Erase DTC
 - Live data
 - Without smart
 - All keys lost
 - Erase DTC
 - Live data
 - Type 2
 - ECU identification
 - Fault codes
 - Erase DTC
 - Live data
 - Input security code
 - Input security code
 - Program function
 - Program keys
 - Erase keys
 - Type 3
 - ECU identification
 - Program keys
 - Erase keys
 - Type 4
 - Erase keys
 - Program keys
- Remote
 - Astra-H
 - Erase remote keys
 - Program remote key

Corsa-D

Erase remote keys

Program remote key

Zafira-B

Erase remote keys

Program remote key

Vectra-C/Signum

Erase remote keys

Program remote key